Electric paper cutter

Step 1: Adjust the side gauge with the back-gauge crank to the correct paper measurement

Step 2: Lift up the safety guard

Step 3: Place paper into the paper cutter

Step 4: Turn the clamp hand wheel clockwise to clamp the stack of paper tightly

Step 5: Put the safety guard down

Step 6: Turn on the paper cutter

Step 7: Press and hold the two green buttons at the same time until the paper is cut

Step 8: Turn the clamp hand wheel counterclockwise to lift the clamp up

Step 9: Remove the paper

Step 10: Turn off the paper cutter

Clamp hand wheel



Blade height adjustment

Safety guard

Backgauge crank

stick

hole

On/Off Switch

Note: If the blade height needs adjustment, place the fine adjustment device in blade height adjustment hole at the top right of the machine. Rotate the fine adjustment device right or left to adjust accordingly. The cutting stick can be rotated or changed by placing the fine adjustment device in the hole for lifting up the cutting stick.

Informatics workers should be the only people adjusting the blade height and moving the cutting stick. The fine adjustment device is located in the supplies cabinet behind the second floor desk.